


Tray slides can be installed to accommodate any width tray. The slides may be positioned anywhere along the length of a shelf. The shelf above and below must be installed 22" apart on center.

- Step 1** Unpack carton to confirm all necessary components are included.
- Step 2** Place the left tray slide in the desired position between the two shelves.
- Step 3** At the top front of the slide, position the large clip over the shelf wires, and the small clip under the double wires of the slide and perpendicular to the large clip.
- Step 4** Insert the screw and tighten.
- Step 5** Repeat at the top back of the slide and again at the bottom, both front and rear.
- Step 6** Place black pvc bolt boots over exposed ends of bolts.
- Step 7** Install right half of the slide as in steps 2 through 6. VERIFY THAT THE SPACING BETWEEN SLIDES IS CORRECT FOR THE SIZE OF TRAY TO BE USED.

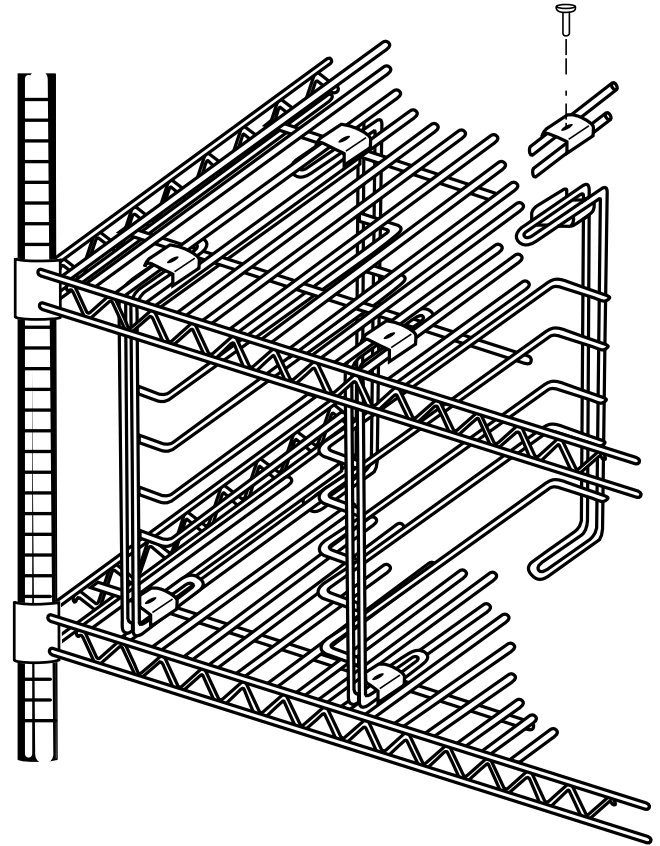

## Material List

- Left and right slide
- Mounting hardware – includes
  - 4 each small clips,
  - 4 each large clips
  - 4 each bolts
  - 4 pvc bolt boots

Modelo # FWTSI2CH & FWTSI2GN | Correderas de  
Bandejas de Alambre

Se pueden instalar correderas de bandejas para dar cabida a cualquier anchura de bandeja. Las correderas se pueden colocar en cualquier lugar a lo largo de la longitud de un estante. Los estantes de arriba y de abajo se deben instalar a una distancia de 22 pulgadas entre centros.

**Paso 1** Desembale la caja de cartón para confirmar que están incluidos todos los componentes necesarios.

**Paso 2** Coloque la corredera de la bandeja izquierda en la posición deseada entre los dos estantes.


**Paso 3** En la parte frontal superior de la corredera, coloque el gancho grande sobre los alambres del estante, y el gancho pequeño debajo de los cables dobles de la corredera y perpendicular al gancho grande.

**Paso 4** Inserte el tornillo y apriételo.

**Paso 5** Repita lo mismo en la parte superior posterior de la corredera y otra vez en la parte inferior, tanto por delante como por detrás.

**Paso 6** Coloque los capuchones negros de pvc para los pernos sobre los extremos expuestos de los pernos.

**Paso 7** Instale la mitad derecha de la corredera usando los mismos pasos 2 al 6.  
VERIFIQUE QUE EL ESPACIO ENTRE LAS CORREDERAS SEA EL CORRECTO PARA EL TAMAÑO DE LA BANDEJA A UTILIZAR

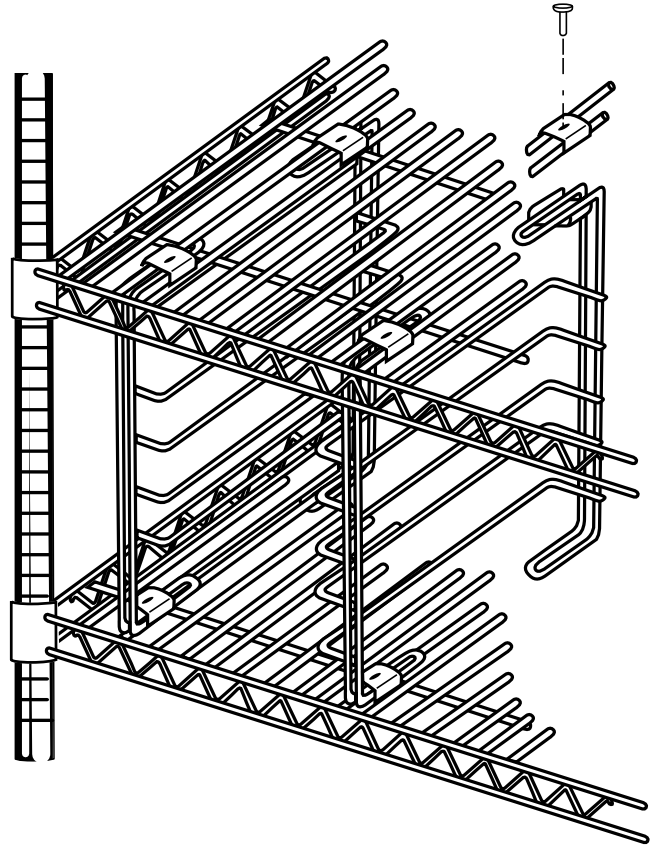

**Lista de Materiales**

- Correderas izquierda y derecha
- Accesorios de montaje - incluyen
  - 4 ganchos pequeños,
  - 4 ganchos grandes
  - 4 pernos
- 4 capuchones de pvc para pernos